

**With the AGFA Ephoto 307 camera, I can preview a picture, however I get the error, CAM\_BAD\_WRITE. when I try to take the picture. What is causing this?**

This problem is displayed when you attempt to take a photo and the camera is full. To empty the camera, click on the **In Camera** Tab and **Erase All**. You will be asked if you are sure that this is what you want to do. Select **Yes**.