

With the Olympus D340x Camera, I can preview a picture, however I get the error, CAM_BAD_WRITE, when I try to take the picture. What is causing this?

This problem is displayed when you attempt to take a photo and the camera is either full or the memory card has not been inserted into the camera. To empty the camera, click on the **In Camera** Tab and **Erase All**. You will be asked if you are sure that this is what you want to do.

Select **Yes**.