

## **I get the error: Unable to Contact Sentry Block, Check Sentry. What is causing this problem?**

The Block is NOT attached to the system. The Sentry Block needs to be attached to the computer system's LPT Port.